


Features	Alarm clock with two-tone alarm, infinite snooze function, key-lock and built-in background light.
Data field:	Divided in segments. Inner segment flashes every second, middle segments display hours (12) and outer segments display minutes (60). The time is read by adding the displayed hours and minutes. On the above Timer clock the time is 05.45 or 17.45.
Operating FRONT PANEL:	
V ALARM SET	
- Time mode, 1 short press:	A short press displays the set alarm time for 5 seconds whereafter the Timer clock automatically reverts to normal time.
- Time mode, press and hold:	Press and hold for more than two seconds to set the alarm time.
- Time- or alarm setting mode, short press:	Decreases time at time- or alarm setting by one minute per press.
- Time- or alarm setting mode, press and hold:	Press and hold for one second in order to decrease the time faster.
TIME SET A	
- Time mode, 1 short press:	A short press displays the set alarm time for 5 seconds whereafter the Timer clock automatically reverts to normal time.
- Time mode, press and hold:	Press and hold for more than two seconds to set the time.
- Time- or alarm setting mode, short press:	Increases time at time- or alarm setting by one minute per press.
- Time- or alarm setting mode, press and hold:	Press and hold for one second in order to decrease the time faster.
Operating TOP PANEL:	
ON	
- Time mode, 1 short press	Activates the built-in background light for five seconds.
- Time mode, press and hold	Press and hold for two seconds to activate the alarm (the alarm icon is displayed in the center of the clock).
- Alarm mode, 1 short press	Activates the snooze function in intervals of 8 minutes and the built-in background light for five seconds when in alarm mode.
OFF	
- Time mode, 1 short press	Activates the built-in background light for five seconds.
- Time mode, press and hold	Press and hold for two seconds to deactivate the set alarm.
- Alarm mode, 1 short press	Activates the snooze function in intervals of 8 minutes and the built-in background light for five seconds when in alarm mode.
- Alarm mode, press and hold	Press and hold for two seconds to deactivate the alarm (the alarm icon disappears).
Operating Battery compartment	
Key lock On/Off	Activates / deactivates the key-lock.
	Alarm icon in the center of the clock.
- stationary	The alarm is activated, when the icon is displayed.
- flashes	The icon flashes when the alarm sounds or the snooze-function is activated. The built-in background light is activated for five seconds.
Batteries:	2 pcs. "AAA" batteries.
Material:	ABS, steel and glass.
Colours:	Anthrazit grey, Metallic blue or Golden.
Dimensions:	76 x 62 x 25 mm.
App. weight:	152 g.